


Components

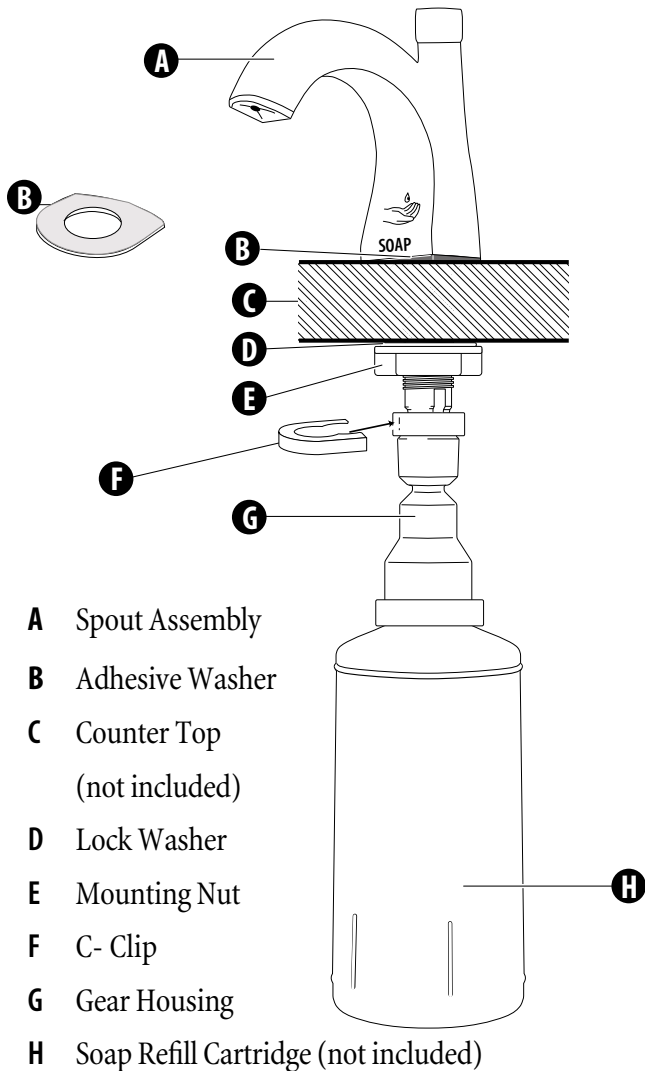

Installation Instructions

1.1 Replacing Existing Soap Dispenser

- A) Remove old components.
- B) Clean area.
- C) Ensure hole is $1\frac{5}{16}$ " to $1\frac{1}{4}$ " diameter

2.2 Peel off one side of the plastic sheet from the adhesive washer (B) and attach to the bottom of the spout. Peel off the other side of the plastic sheet from the adhesive washer.

2.3 Guide the threaded shank through hole in counter.

2.4 Position spout to direct soap into sink. Secure to counter by pressing to adhere washer.

2.5 Secure lock washer and mounting nut onto shank and then hand tighten.

3.1 Slide C-clip (F) to the open position on the gear housing.

3.2 Place the gear housing (G) at the bottom of the shank.

3.3 Align metal rod (I) from shank with small guide hole in the gear housing (G).

3.4 Push the gear housing up into place and secure by pushing the C-clip closed (F).

4.1 Install soap refill (*be sure to open refill pump assembly*) and prime refill by pumping dispenser 8-10 times.

French and Spanish translations of these instructions can be viewed on: <http://www.technicalconcepts.com>