


AutoFlush® Unit for Urinals & Toilets



INSTALLATION INSTRUCTIONS

Manufactured by:
TECHNICAL CONCEPTS • 1-800-551-5155


Looks Clean - Is Clean™

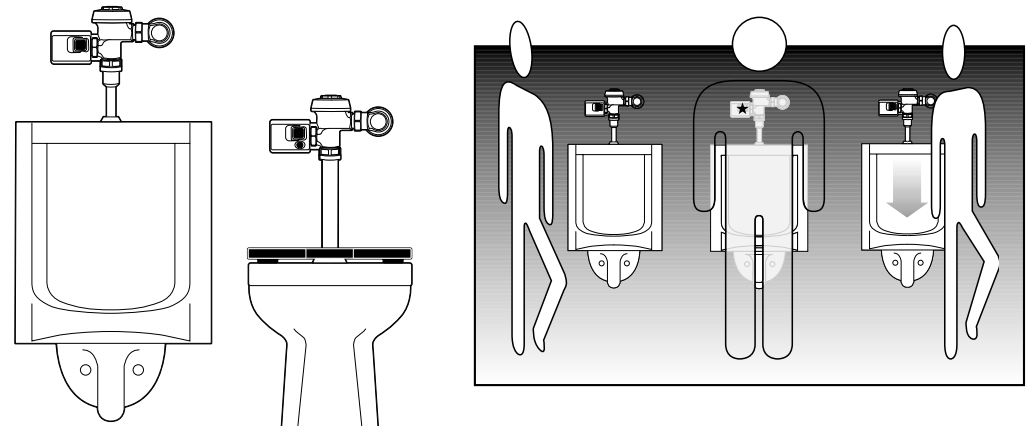





The AutoFlush® sends out a continuous infrared beam that is reflected back by the presence of a person in front of the urinal or toilet. "Object Lock" technology differentiates between someone walking past the unit or actually using the fixture.

AUTOFLUSH COMPONENTS

AutoFlush for Urinals

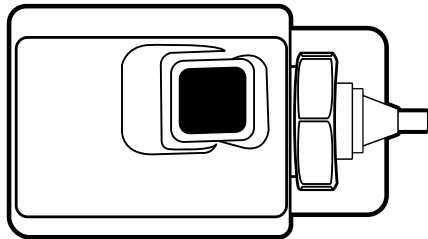

AutoFlush for Toilets

 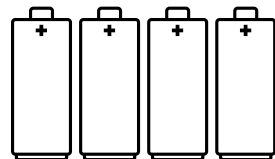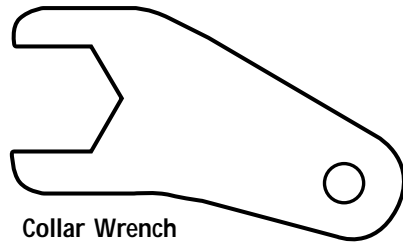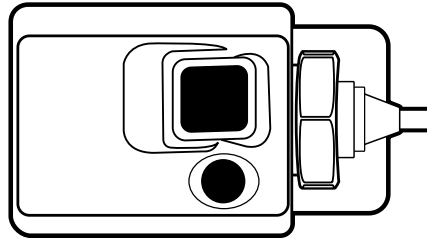

4 "C" Alkaline Batteries

2 ACTIVATION

Using supplied battery compartment wrench, remove battery compartment from the AutoFlush unit.




Load batteries into compartment tray (note position of batteries in tray), and reinstall battery tray into the AutoFlush unit.

Secure tray with battery compartment wrench. The last three turns of the wrench will activate the AutoFlush unit.


Your AutoFlush unit comes preset from the factory. If special circumstances require adjustment of the activation distance, see Appendix A—Adjusting your AutoFlush.

The AutoFlush unit has a 7 minute start-up sequence in which the Object Lock Sensor will flash the User-In-View green L.E.D. continuously as long as a user is in view. After the start-up sequence is completed and when the Object Lock Sensor has a user in view, the User-In-View green L.E.D. will flash only 3 times after 5 seconds delay. This delay prevents needless flushes when someone walks by.

Remove Battery Compartment

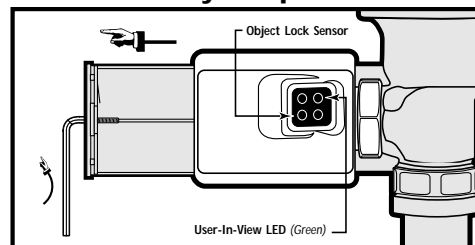

Install Battery Compartment

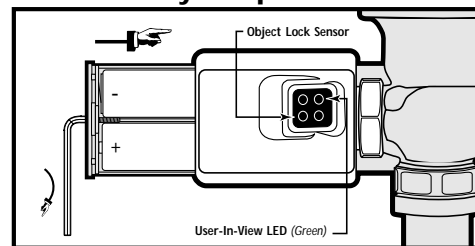





1 INSTALLATION

Using the supplied collar wrench, remove handle from flush valve.

Note: On some flush valves with a faulty air vent, or recently flushed valve, be prepared to collect a small amount of water with a rag or sponge placed under the handle.

Place collar gasket into collar nut and attach the AutoFlush unit where the handle was removed. Tighten collar nut with supplied collar wrench.

Note: Save handle in the event you wish to reuse for service of AutoFlush.

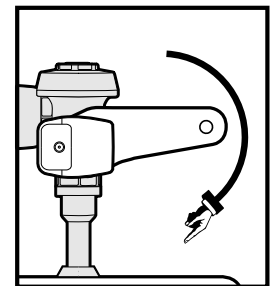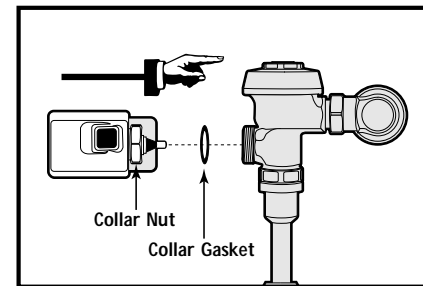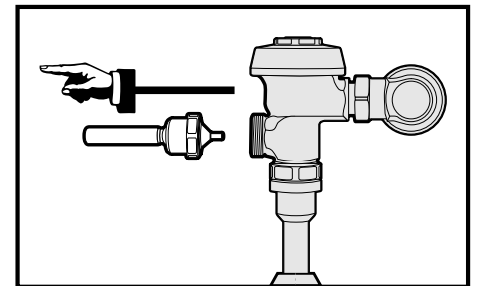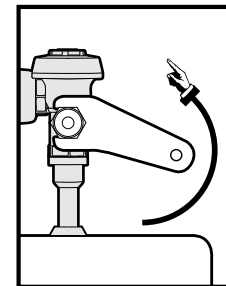


VISUAL INDICATOR GUIDE

USER-IN-VIEW L.E.D. (Green light flashes 3 times, after 5 second delay, when a user is in view. The green light flashes constantly when a user is in view during the 7 minute start up sequence).


BATTERY L.E.D. (Yellow light flashes indicating it is time to replace batteries with 4 new "C" batteries).

OBJECT LOCK SENSOR (Detects user or object).


COURTESY MANUAL FLUSH BUTTON (Allows manual activation of flush when needed—Toilet model only).

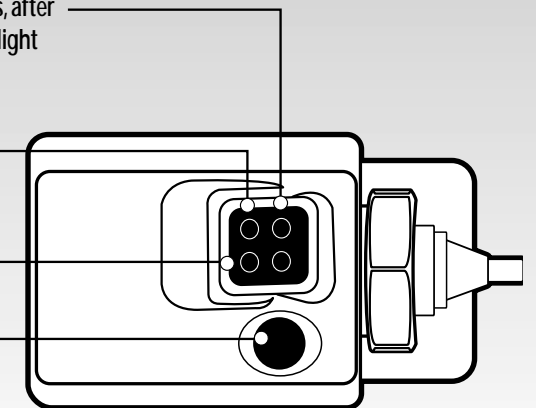


APPENDIX A - ADJUSTING YOUR AUTOFLUSH

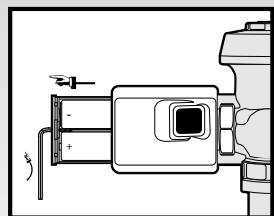


Use battery compartment wrench to remove battery compartment tray.

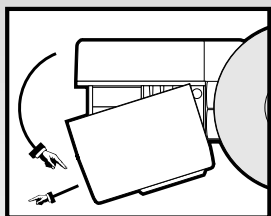

Remove cover by rotating the cover up at the end over the battery compartment and slide out.

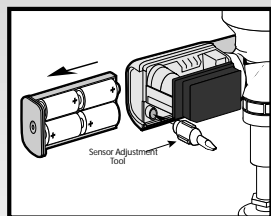

Sensor Adjustment Tool comes in a built in storage pocket. Replace after use.

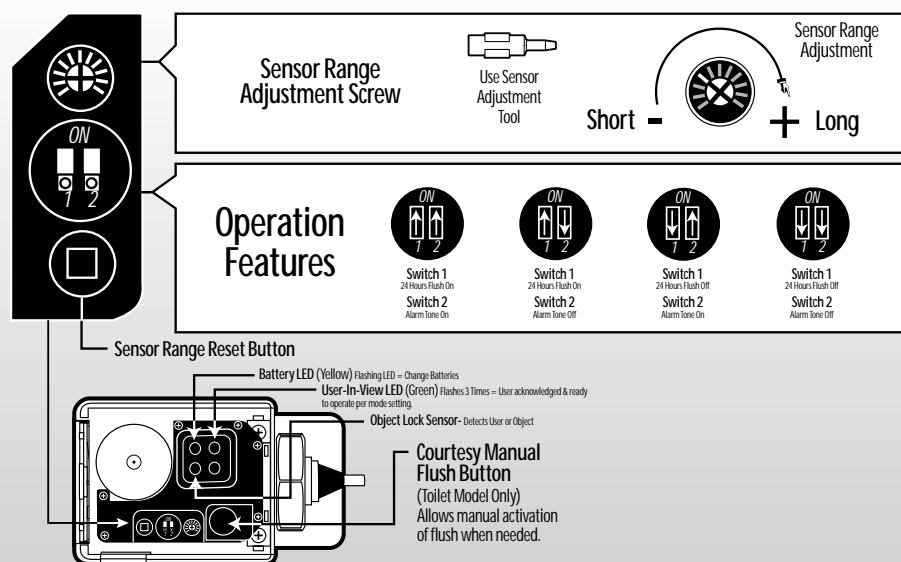

TO CHANGE ACTIVATION DISTANCE FOR THE OBJECT LOCK SENSOR:

- 1 Remove battery compartment tray as shown at left.
- 2 Remove cover and sensor adjustment tool as shown at left.
- 3 Replace battery compartment in AutoFlush to activate unit.
- 4 Press sensor range reset button shown in Appendix A (the green L.E.D. will flash continuously when it has an object in view for the seven minute reset period).
- 5 Stand at desired activation distance.
- 6 Use sensor adjustment tool and turn Sensor Range Adjustment Screw all the way down (counter clockwise) and then turn slowly up (clockwise) until green L.E.D. begins to flash.
- 7 Ensure Object Lock Sensor is not detecting stall door or wall by closing door, stepping out of sensor path and making sure green L.E.D. is not flashing. If sensor locks onto door or wall, unit will not flush properly. Shorten activation distance.
- 8 Remove battery compartment, replace sensor adjustment tool and cover. Replace battery compartment tray to reactivate AutoFlush unit.
- 9 After 7 minute start-up sequence, the green L.E.D. will flash only 3 times when a user is in view (after a 5 second delay).

TROUBLE SHOOTING GUIDE

PROBLEM	CAUSE	SOLUTION TO PROBLEM
Green L.E.D. (light) flashes 3 times when there are no users	Front of Object Lock Sensor is covered or Object Lock Sensor is set too far out, registering the opposite wall or door as a user	Remove item covering sensor or adjust Sensor Range activation distance. (See Appendix A - Adjusting the AutoFlush)
Green L.E.D. (light) flashes continuously when Object Lock Sensor is activated by a user	AutoFlush unit is in 7 minute start up mode (when first activated) or Sensor Range Reset Button has been depressed	Green L.E.D. (light) will flash only 3 times acknowledging a user is in view after the 7 minute start up mode
Yellow L.E.D. (light) flashes	Batteries need replacing	Replace batteries
Not enough water to fixture or too much water to fixture	Diaphragm damaged or valve control stop improperly adjusted	Replace diaphragm and/or adjust valve control stop
Valve will not operate	Object Lock Sensor range set to close to AutoFlush, batteries are dead, or water supply is turned off	Adjust Object Lock Sensor—Replace batteries—Turn water on. If the AutoFlush does not begin to function, call (800) 551-5155 for technical assistance.
Valve does not shut off	Dirt or debris preventing diaphragm from functioning properly	Remove dirt or debris, consult valve manufacturer's directions
Valve does not flush even after Sensor Range has been adjusted	Dead batteries	Replace batteries.

Spanish and French installation instructions are available at www.technicalconcepts.com

Instrucciones de instalacion en Frances y en Español estaran disponibles en la pagina www.technicalconcepts.com

Les instructions pour l'installation sont disponibles en francais et en espagnol sur notre site web ; www.technicalconcepts.com



World Headquarters:
Serving North & South America

Technical Concepts LLC.
1301 Allanson Road
Mundelein, Illinois 60060 U.S.A.
☎ 847-837-4100
Fax: 1-800-551-5046

European Headquarters:
Serving Europe, Africa & Middle East

Technical Concepts International Ltd.
Pin Green Business Park Eastman Way
Stevenage, Herts SG1 4UH, England
☎ +44 (0)870 568 6824
Fax: +44 (0)1438 311200

Asian Headquarters:
Serving Asia & Pacific

Technical Concepts Asia
51 (B) Lorong Perindustrian Bukit minyak 9
14100 Bukit Mertajam, Penang, Malaysia
☎ (60) 4 508 5008
Fax: (60) 4 508 5001

Toll Free: 1-800-551-5155

Web: www.technicalconcepts.com

Email: info@technicalconcepts.com

Have Questions or Need Supplies? Call Toll Free: 1-800-551-5155