



# AutoFlush® Clamp for Urinals & Toilets



## INSTRUCTIONS

Manufactured by:  
TECHNICAL CONCEPTS • 1-800-551-5155

*Looks Clean - Is Clean™*

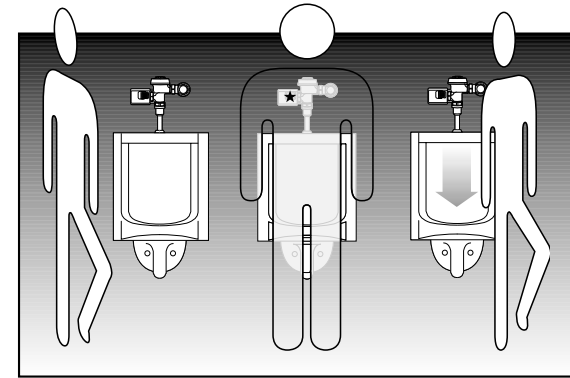
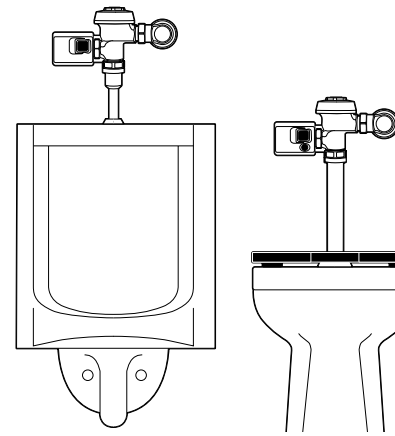


The AutoFlush® sends out a continuous infrared beam that is reflected back by the presence of a person in front of the urinal or toilet. "Object Lock" technology differentiates between someone walking past the unit or actually using the fixture.

## AUTOFLUSH® COMPONENTS

AutoFlush® for Urinals


AutoFlush® for Toilets

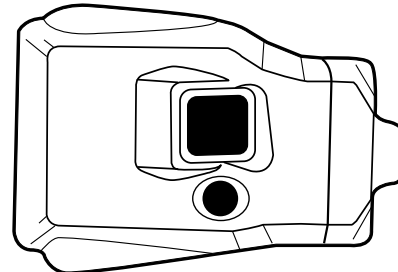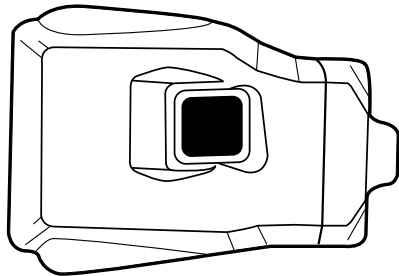

Allen Wrench



Sensor Adjustment  
Tool



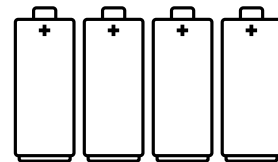


4 "C" Alkaline Batteries

NOTE: Fits Sloan and Zurn flush handles. To fit other flush handles contact TC customer service at 800-551-5155.

### Step 1. (Continued)



- 1.3 Use the Allen wrench to unscrew the two hex bolts at the neck of the unit until a few threads are still screwed into the connecting bracket.
- 1.4 Slide the AutoFlush® on to the flush handle and secure the mounting clamp over the existing handle base.

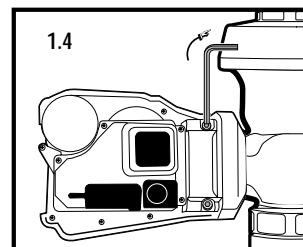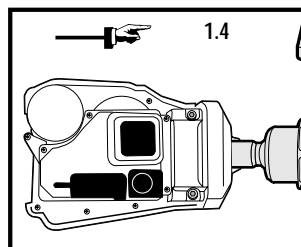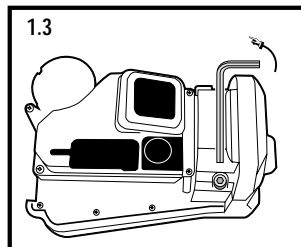

NOTE: If the unit is on a high mount toilet flush valve where the flush handle is approximately 40° above the floor, you should rotate the AutoFlush® down to ensure sensor is directed at user.



### Step 1. (Continued)

- 1.5 Replace the AutoFlush® cover. See illustration 1.5
- 1.6 Install 4 "C" cell alkaline batteries into the battery compartment noting the battery position marks on the inside of the compartment. Slide the battery compartment into the AutoFlush® unit and secure tray with Allen wrench. The last three turns of the wrench will activate the AutoFlush® unit.

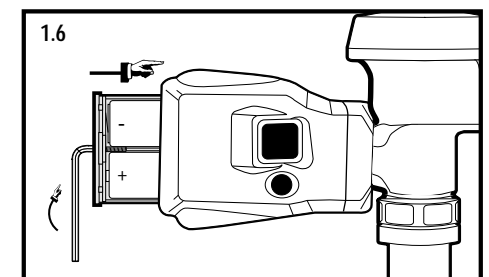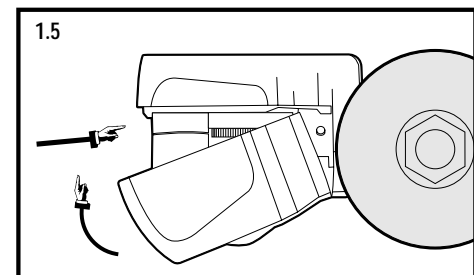

### Step 1. If flush handle is leaking, replace before installing AutoFlush®


- 1.1 Using the supplied Allen wrench, remove battery compartment.
- 1.2 Remove AutoFlush® cover by rotating the cover up at the end over the battery compartment and slide out. See illustration 1.2

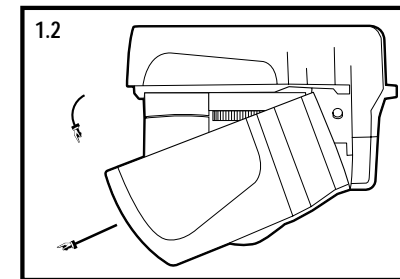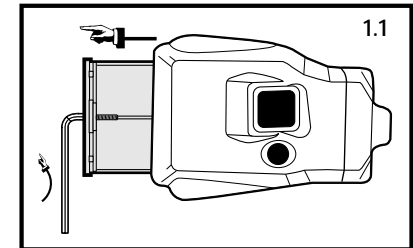


## Step 2. ACTIVATION

Your AutoFlush® unit comes preset from the factory. If special circumstances require adjustment of the activation distance, see Appendix A—Adjusting Your AutoFlush®.


The AutoFlush® unit has a 7 minute start-up sequence in which the Object Lock Sensor will activate the User-In-View green L.E.D. continuously as long as a user or object is in view. After the start-up sequence is completed and when the Object Lock Sensor has a user in view, the User-In-View green L.E.D. will flash 3 times once the user is in front of the unit for a minimum of 5 seconds. This prevents needless flushes when someone walks by.

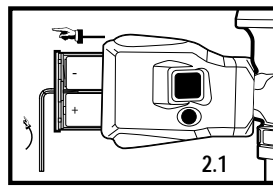

Use Allen wrench to remove battery compartment tray.

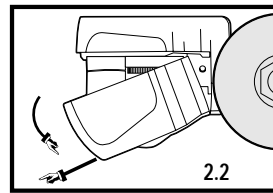

Remove cover by rotating the cover up at the end over the battery compartment and slide out.

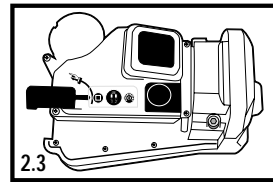

Remove rubber seal.


## VISUAL INDICATOR GUIDE

**USER-IN-VIEW L.E.D.** (Green light flashes 3 times, after 5 second delay, when a user is in view. The green light flashes constantly when a user is in view during the 7 minute start up sequence).


**BATTERY L.E.D.** (Yellow light flashes indicating it is time to replace batteries with 4 new “C” cell alkaline batteries).

**OBJECT LOCK SENSOR** (Detects user or object).

**COURTESY MANUAL FLUSH BUTTON** (Allows manual activation of flush when needed—Toilet model only).

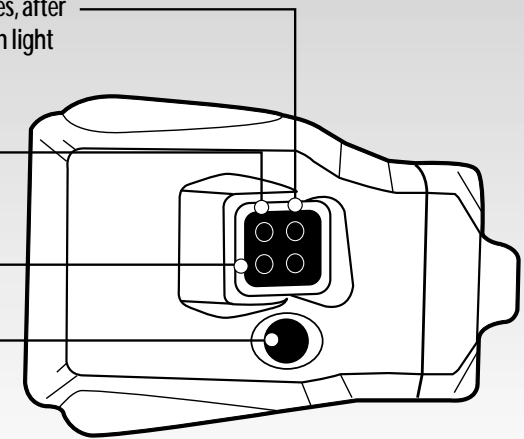

## APPENDIX A - ADJUSTING YOUR AUTOFLUSH®

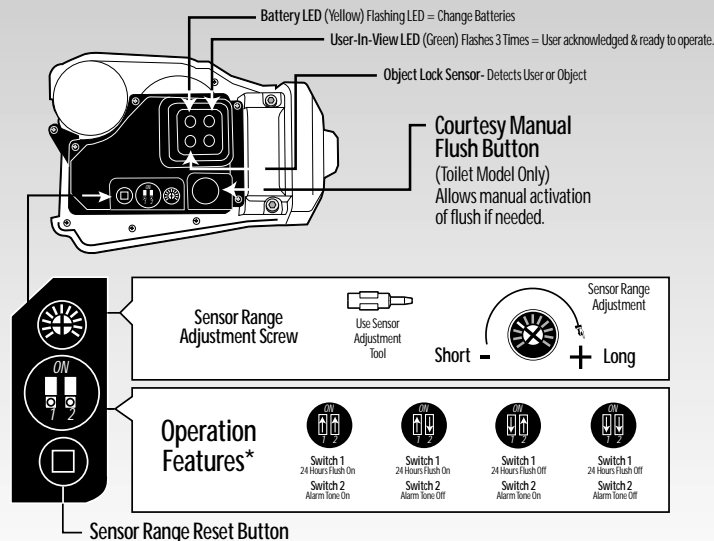

\*Trap Seal Protection (24hr flush): Ensures fixtures are flushed at least once every 24 hours. This feature prevents sewer gases escaping through open trap. This feature can be turned off by placing switch #1 in the down position.

\*Battery Replacement Tone: Optional audio tone reinforces yellow LED (change batteries). This feature can be turned off by placing switch #2 in the down position.

## TO CHANGE ACTIVATION DISTANCE FOR THE OBJECT LOCK SENSOR:

- 1 Remove battery compartment. See illustration 2.1.
- 2 Remove cover. See illustration 2.2.
- 3 Replace battery compartment in AutoFlush® to activate unit and remove rubber seal. See illustration 2.3.
- 4 Press sensor range reset button as indicated in Appendix A. NOTE: the green L.E.D. will flash continuously when it has an object in view for the seven minute reset period.
- 5 Stand at desired activation distance.
- 6 Use provided sensor adjustment tool and turn Sensor Range Adjustment Screw all the way down (counter clockwise) and then turn slowly up (clockwise) until green L.E.D. begins to flash.
- 7 Ensure Object Lock Sensor is not detecting stall door or wall by closing door, stepping out of sensor path and making sure green L.E.D. is not flashing. If sensor locks onto door or wall, unit will not flush properly. Shorten activation distance.
- 8 Remove battery compartment, and replace cover. Replace battery compartment tray to reactivate AutoFlush® unit.
- 9 After 7 minute start-up sequence, the green L.E.D. will flash only 3 times when a user is in view (after a 5 second delay).

## TROUBLE SHOOTING GUIDE

PROBLEM	CAUSE	SOLUTION TO PROBLEM
Green L.E.D. (light) flashes 3 times when there are no users	Front of Object Lock Sensor is covered or Object Lock Sensor is set too far out, registering the opposite wall or door as a user	Remove item covering sensor or adjust Object Lock Sensor activation distance. (See Appendix A - Adjusting the AutoFlush)
Green L.E.D. (light) flashes continuously when Object Lock Sensor is activated by a user	AutoFlush® unit is in 7 minute start up mode (when first activated) or Sensor Range Reset Button has been depressed	Green L.E.D. (light) will flash only 3 times acknowledging a user is in view after the 7 minute start up mode
Yellow L.E.D. (light) flashes	Batteries need replacing	Replace batteries. Use ONLY alkaline batteries
Not enough water to fixture or too much water to fixture	Diaphragm damaged or valve control stop improperly adjusted	Replace diaphragm and/or adjust valve control stop
Valve will not operate	Object Lock Sensor range set to close to AutoFlush®, batteries are dead, or water supply is turned off	Adjust Object Lock Sensor—Replace batteries—Turn water on. If the AutoFlush® does not begin to function, call (800) 551-5155 for technical assistance.
Valve does not shut off	Dirt or debris preventing diaphragm from functioning properly	Remove dirt or debris, consult valve manufacturer's directions
Valve does not flush even after Sensor Range has been adjusted	Dead batteries	Replace batteries.

Spanish and French instructions are available at [www.technicalconcepts.com](http://www.technicalconcepts.com)

Instrucciones en Frances y en Español estaran disponibles en la pagina [www.technicalconcepts.com](http://www.technicalconcepts.com)

Les instructions sont disponibles en francais et en espagnol sur notre site web ; [www.technicalconcepts.com](http://www.technicalconcepts.com)

Have Questions or Need Supplies?  
Call Toll Free: 1-800-551-5155



Toll Free: 1-800-551-5155

World Headquarters:  
Serving North & South America  
Technical Concepts LLC.  
1301 Allanson Road  
Mundelein, Illinois 60060 U.S.A.  
☎ 847-837-4100  
Fax: 1-800-551-5046

Web: [www.technicalconcepts.com](http://www.technicalconcepts.com)

European Headquarters:  
Serving Europe, Africa & Middle East  
Technical Concepts International Ltd.  
Pin Green Business Park Eastman Way  
Stevenage, Herts SG1 4UH, England  
☎ +44 (0)870 568 6824  
Fax: +44 (0)1438 311200

Asian Headquarters:  
Serving Asia & Pacific  
Technical Concepts Asia  
51 (B) Lorong Perindustrian Bukit minyak 9  
14100 Bukit Mertajam, Penang, Malaysia  
☎ (60) 4 508 5008  
Fax: (60) 4 508 5001

Email: [info@technicalconcepts.com](mailto:info@technicalconcepts.com)